## refillingmarkers VARIOUS INK

Broad Nib or

Medium Broad Nib

CURROUSING When you see streaking in your work, it is time to refill your marker.

## Drip and dab method

1. Hold the marker in one hand, at a slightly tilted angle, with the flat side ofthe Broad or Medium Broad Nib up.

2. With your other hand, gently dab 15-20 drops onto the nib surface, allowing each drop to be absorbed before adding the next.

> **Notes:** Try not to overfill. If overfilling occurs, use a tissue to absorb the extra ink.Maximum fill:Sketch 3cc.COPIC 4cc. Use rubbing alcohol to clean any ink the insides clean with a cotton swab.

**COPIC: Using the Booster** 

1. Screw the booster needle onto your various ink bottle. Carefully remove the protective cap.

- 2. For COPIC markers carefully insertthe booster along the side of the nib.
- 3. Add 2-3cc's ink (depending on how empty your marker is). The back of the Various Ink bottle has measurements on it. Immediately replace the marker cap when done.

Match the color number of your marker with the color number on the Various Ink Cap

**Refilling Wide Markers** 

Hold the marker at a 45° angle, then drip and dab Various Ink into the provided notch. Holds up to 5cc's

1. Screw the booster needle onto your various ink bottle. Carefully remove the protective cap.

3. Add 2-3cc's ink (depending on back of the Various Ink bottle has measurements on it. Immediately

## Sketch: Using the Booster

- 2. For Sketch markers, remove the Med. Broad Nib from your marker.
- how empty your marker is). The replace the nib and marker cap when done.

**COPIC Booster** Warnings!



- Booster is sharp.
- Always recap after use.

A BROAD

- · Not intended for children.
- Clean Booster with Rubbing alcohol after each use.

For questions or comments contact us at Imagination International, Inc. COPIC Markers (541) 684-0013, or at www.copicmarker.com Copyright © 2008 Imagination International, Inc. All Rights Reserved



Medium BROAD Sketch